
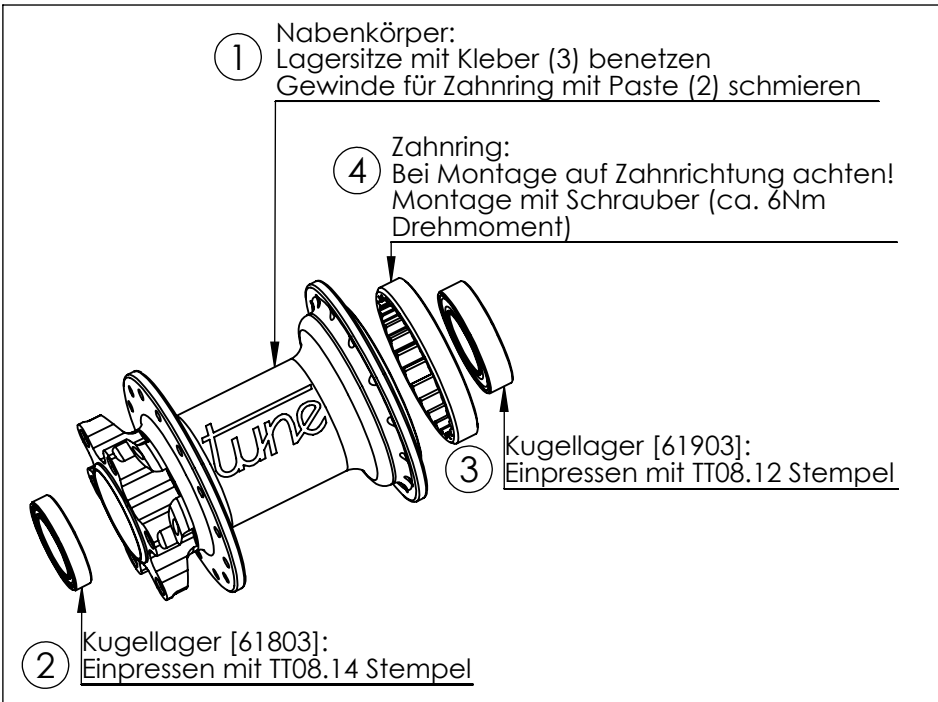


Montageanleitung Hinterradnaben MTB



- Prince, Prince Straight, Kong, Kong MK, Singlespeeder, Fat Kong

Stand: Januar 2015
as of: January 2015

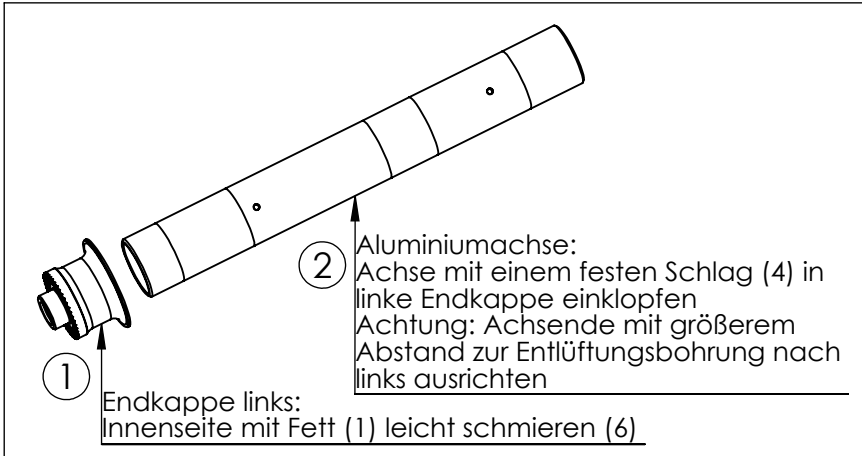

- Verwendete Materialien / Werkzeuge:
- (1) Fett: Molykote Longterm 2 Plus
 - (2) Paste: Molykote Rapid Plus Paste
 - (3) Kleber: 3M Scotch-Weld TL-70 (alternativ Loctite 641)
 - (4) Gummihammer
 - (5) Öl: Power Oil HD 15W/40 SJ-CF
 - (6) Pinsel

Formel - Lagerspiel ausdistanzieren:
Stärke der Passscheiben = Achsüberstand - (Tiefe der Endkappe + 0,15mm)

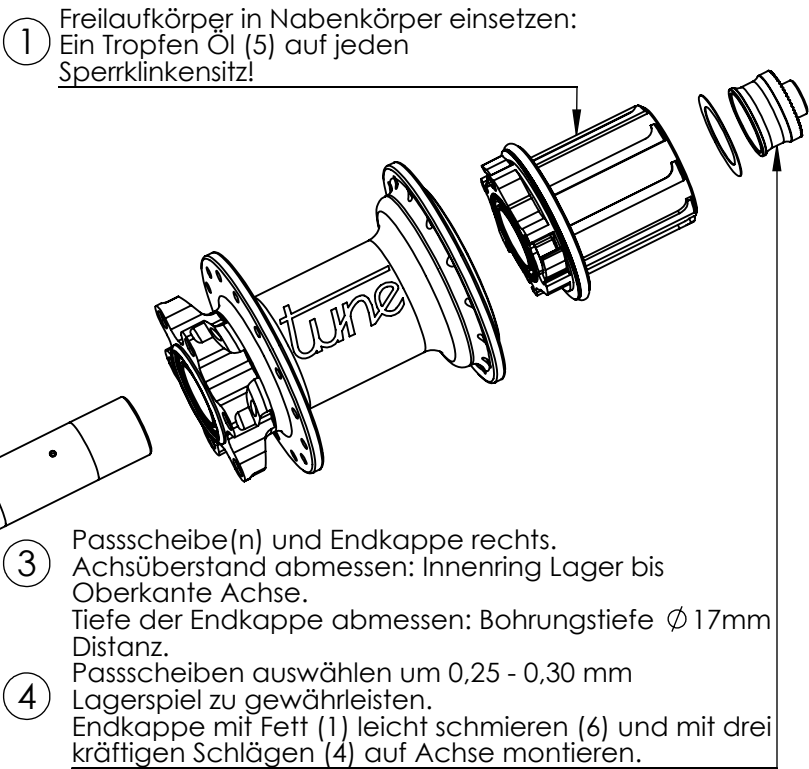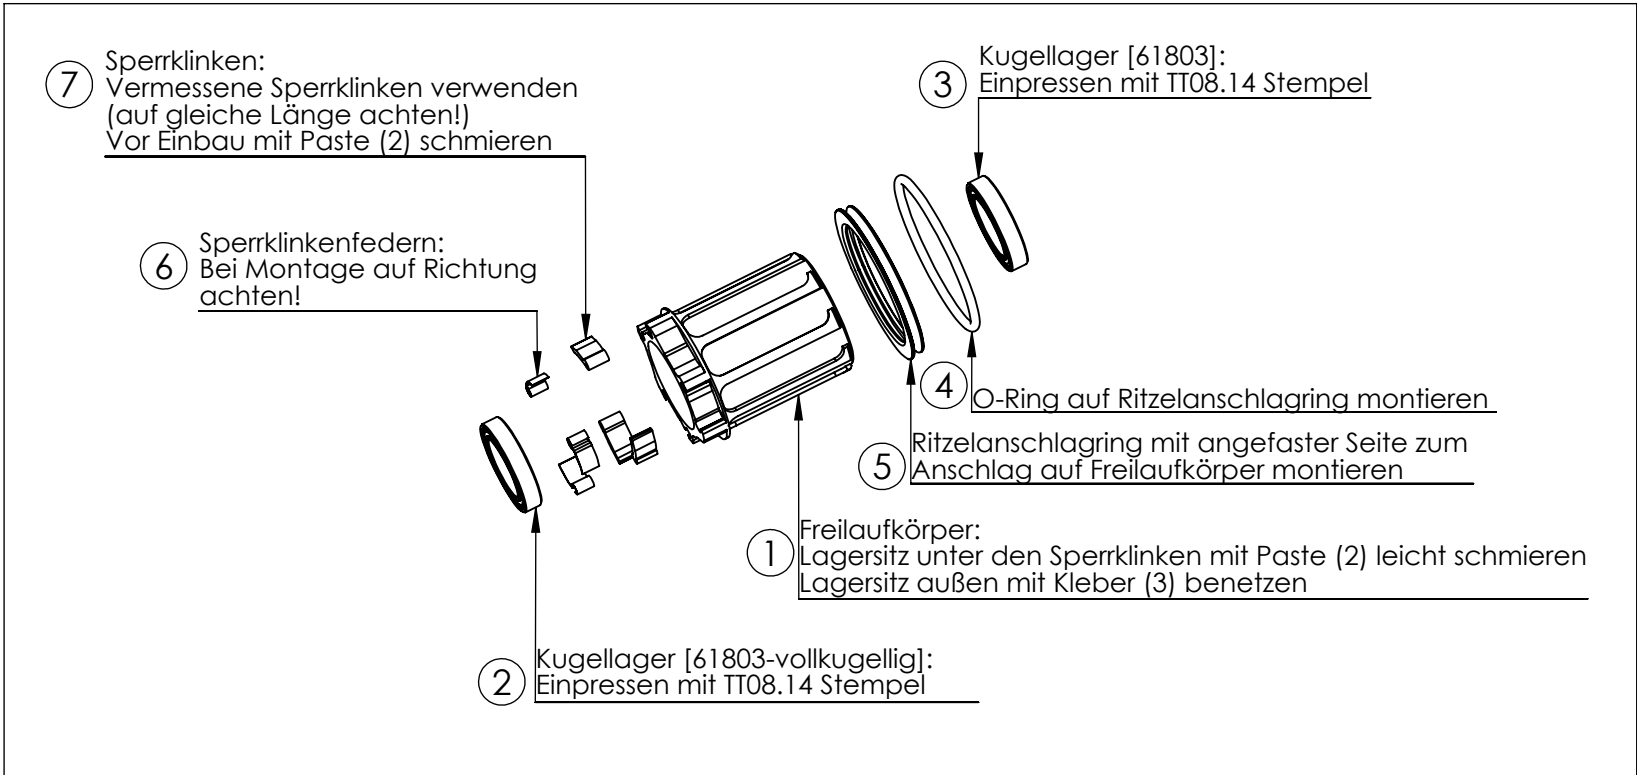

- Abschließende Qualitätscheckliste:
- 1.) Reinigung der Nabe
 - 2.) Sichtkontrolle (Eloxalfehler, Verschmutzung)
 - 3.) reibungsarmer/leichter Lagerlauf
 - 4.) leichtlaufender Freilauf

tune U.Fahl E.K.			
PROPRIETARY AND CONFIDENTIAL		NAME	DATE
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF TUNE-U. FAHL E.K. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF TUNE-U. FAHL E.K. IS PROHIBITED.		DRAWN	M. Gluth
		CHK'D	D.Hehenberger
		APPV'D	D.Kürner
Quelldatei: M:\QM\Montageanleitungen\Naben\Hinterrad\Naben_Hinterrad_Montageanleitung_MTB_RevA			A3